




SEIKOH GIKEN

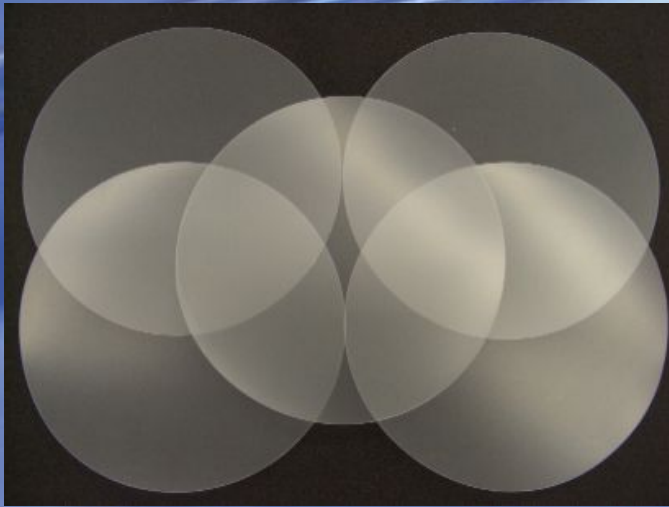

New Final Polishing Film

■ Features


- Stable fiber height over use of film life *for both 2.5mm and 1.25mm polishing*
- Scratch less polishing
- Use only purified water
- Designed to provide GR-326 endface geometry
- Lasts longer compared to exiting finishing films
- Easily achieve cost reduction by longer service life
- Ideal for UPC and APC quality polishing

■ Specifications

Part Number	XF5D, KJW101530G, XF07
Material	SiO ₂
Diameter	127mm, 110mm, 70mm
Color	Translucent
Application	2.5mm and 1.25mm Zr. Ferrule
Film Life	5 to 10 times
Package	100pcs / set
Storage Condition	Temp: 10~30°C Humid: 30~70%

■ Test Data

Polisher : SFP-550
 Holder : PH55-FF-20
 Polishing Time : 1.0min
 Polishing Liquid : Purified water

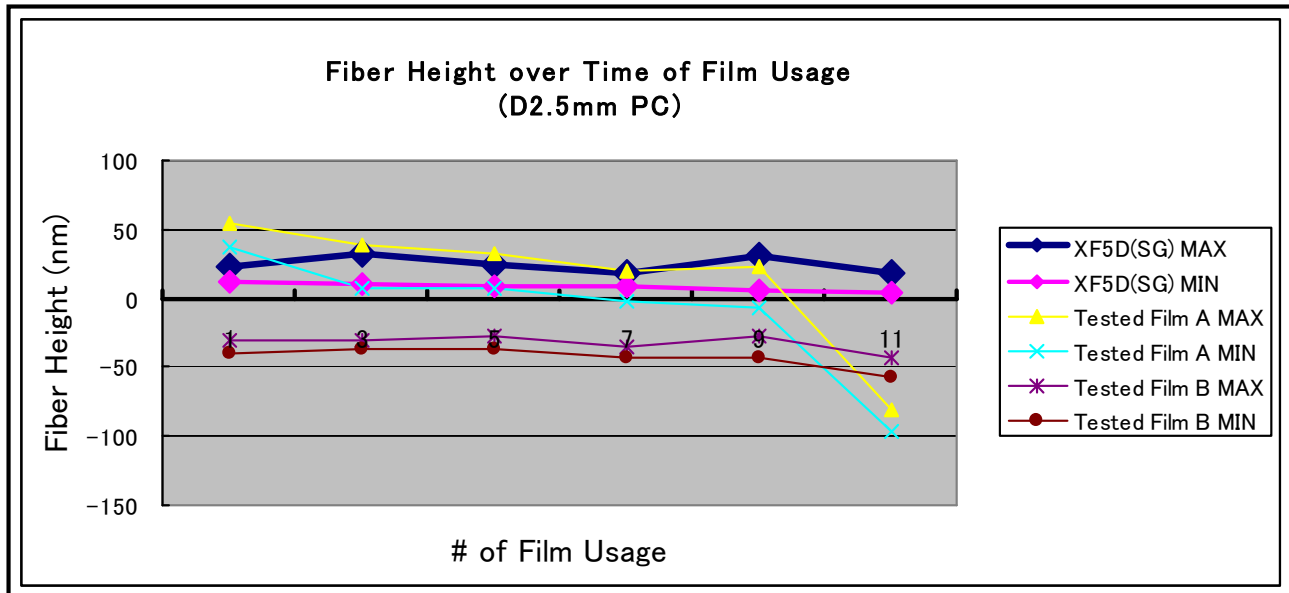

Note: Data in this sheet was under the condition of using SG polishing machine and process.

XF5D film shows consistent & closest 0nm fiber height results over times of use compared with other tested finishing films.

■ Ordering Information

Part Number	Description	Sheet / pack
XF5D	127mm (5") Final Polishing film	100
KJW101530G	110mm Final Polishing film	100
XF07	70mm Final Polishing film	100

WORLDWIDE SUBSIDIARIES AND SALES OFFICES:

North America

SEIKOH GIKEN USA, Inc.
 Atlanta, Georgia
 Tel: +1-770-279-6602
 Fax: +1-770-279-8839
sales@sg-usa.com

Europe

SEIKOH GIKEN Europe GmbH
 Frankfurt, Germany
 Tel: +49-6102-297-701
 Fax: +49-6102-297-750
Jan.vajas@sg-euro.de

Asia

SEIKOH GIKEN Hong Kong Co.,Ltd.
 Hong Kong, China
 Tel: +852-2620-6551
 Fax: +852-2620-6525
yasuo.hashimoto@sg-hk.com.hk